

Spa & Gym Panic Alarms



Operating Instructions

©2018 EMS Ltd. All rights reserved.


Page 1 of 4

MK249 Iss2 26/07/2018 AJM


Introduction

There are three variants of Spa & Gym Panic Alarms, all for use with the 7256 Iris+ Wireless Receiver. Available variants are shown below:


Wireless Push Button Panic Alarm 7920/PB

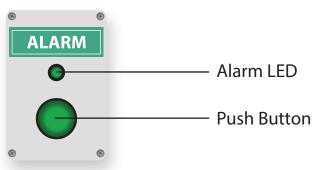


Wireless Push Button Panic Alarm c/w Air Switch 7920/AS

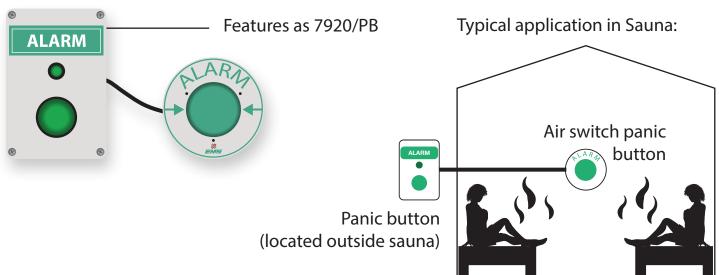

Wireless Pull Cord Panic Alarm 7920/PC

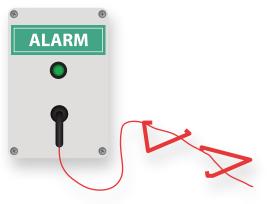

Typical application in WC:

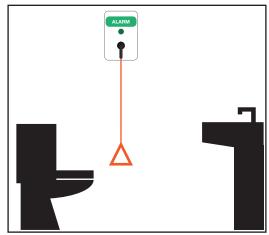


Installation

Remove lid


Loosen the four screws and separate the lid from the back box to expose the wall mounting holes.

Fix back box to wall

Use all four circled fixing positions, to ensure a firm fixing.

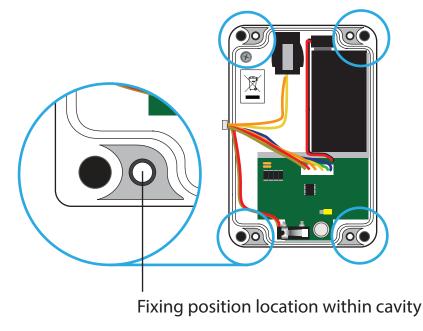


Note; if installing a device with air switch (7920/AS), an additional hole will need to be drilled to accommodate the device's air switch tube socket on the back of the box. See below.

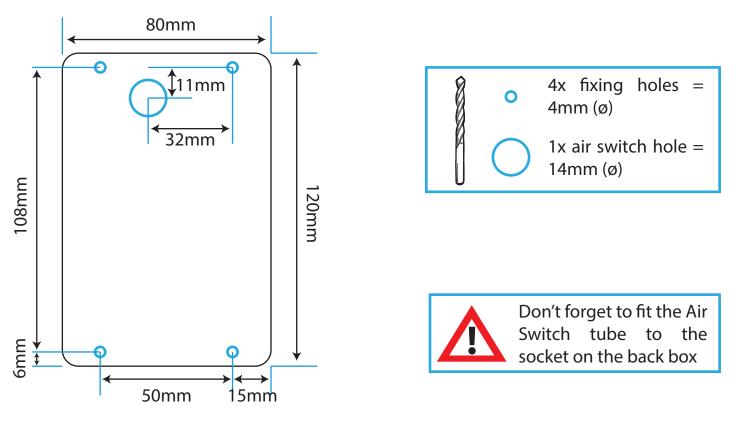

Fix Air Switch to the wall

Use all three fixings to ensure a firm fixing.

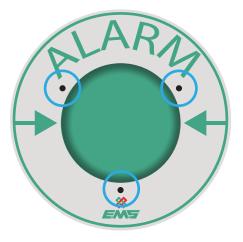

Power the device

Ensure all batteries are fitted, with the battery lead connected.

Reassemble the device

Replace the four lid screws.

Test the transmitter.

Check that a signal is received at the Iris+ receiver upon activation.

Battery replacement.

The device is powered by 6x AAA Alkaline (Panasonic LR03AD Powerline / Varta 4003 Industrial) batteries

When replacing batteries; observe correct polarity, using only specified batteries.

It is also recommended that the device is re-tested to ensure correct operation.



EMS Ltd. Technology House Sea Street, Herne Bay, Kent, CT6 8JZ.

t: +44 (0) 1227 369570 **f:** +44 (0) 1227 369679 **www.**emsgroup.co.uk