


Wireless Detector Installation Guide



1 Pre installation

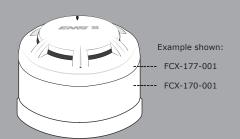


Installation must conform to applicable local installation codes and should only be installed by a fully trained competent person.

- Ensure that the device is installed as per the site survey.
- The use of a non-metallic spacer should be considered if mounting the device on to a metal surface.
- Do NOT Press the Log On button on a pre-programmed device, as this will cause communication with the Control Panel to be lost. Should this happen, delete the device from the system and add it back on.
- This device contains electronics that may be susceptible to damage from Electrostatic Discharge (ESD). Take appropriate precautions when handling electronic boards.

3 Fix mounting plate


device Remove the mounting plate by turning the ANTICLOCKWISE, to release it from the mounting plate.

- Use both mounting holes to ensure a firm fixing.
- Use suitable fasteners and fixings.

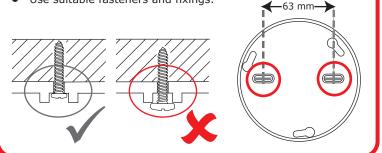

5 Optional device locking

- To lock the wireless module into the mounting plate, insert a 1.5 mm allen key into the allen key slot and turn clockwise as shown.
- The detector can also be locked into the wireless module. To do so, prior to refitting the detector, remove the cut out (shaded) section as shown.

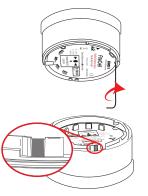

Part no

FCX-170-001 FCX-174-001 FCX-175-001 FCX-176-001 FCX-177-001

Product description

Wireless Detector Base Only Multisensor Smoke Detector Only Heat A1R Detector Only Heat CS Detector Only Optical Smoke Detector Only


CPR [1][1]

See the Specification section for compliance information.

2 Components 1 IONING 1 Dust cover 2 Detector 3 Wireless module 5 Mounting plate 4 Battery retaining plate

4 Power device


- Unclip the battery retaining plate from the wireless module.
- When fitting / replacing batteries; observe correct polarity, using only specified batteries.
- Connect the power jumper across the PIN header.

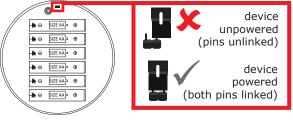

Once powered, reassemble the device.

6 Device unlocking

- To unlock the detector from the wireless module, insert a 1.5mm allen key and lever the allen key towards the outside of the device whilst turning the anticlockwise detector to release as shown.
- To unlock the wireless module from the mounting plate, insert a 1.5 mm allen key and turn anticlockwise to release as shown.

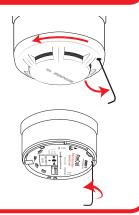

7 Configuration

The device's loop address is configured within the user interface's menu structure.

• Refer to the programming manual for full programming details.

FireCell = MK98 Fusion = TSD062 WZM = TSD143



Free to download from

www.emsgroup.co.uk

- Remove dust cover before use.
- The device should be tested upon installation and in accordance with local requirements.
- Testing should only be carried out by a fully trained competent person.
- The manufacturer recommends regular functional testing of at least once per annum or in accordance with local codes of practice.
- Cleaning and repairs must be undertaken by the manufacturers authorised representative.
- Do not open the case to clean inside the detector.

-					1 B		
5	D	e		са	ы	Ο	n
		_	_			-	

Operating temperature	-10 to +55 °C
Storage temperature	5 to 30 °C
Humidity	0 to 95% non-condensing
Supply	6x AA alkaline (Panasonic LR6AD Powerline / Varta 4006 Industrial)

CAUTION!

Fitting of an incorrect battery type invalidates the product certification and may result in poor performance.

IP rating	IP23	
Operating frequency	868 MHz	
Output transmitter power	Auto adjusting 0 to 14 dBm (0 to 25 mW)	
Dimensions (Ø x D)	113 x 40 mm (without detector) 113 x 76 mm (with smoke detector) 113 x 81 mm (with heat detector) 113 x 87 mm (with multisensor detector)	
Weight	0.40 kg (with detector)	
Location	Type A: For indoor use	

Regulatory in	oformation
Manufacturer	Carrier Manufacturing Polska Sp. Z o.o. Ul. Kolejowa 24. 39-100 Ropczyce, Poland
Year of manufacture	See devices serial number label
Certification	$C \in 10_{[1][2][3]}$ $C \in 20_{[4]}$
Certification body	0905
CPR DoP	See part listing for associated products: [1]0359-CPR-0015, [2]0359-CPR-0017, [3]0359-CPR-0041 & [4]0905-CPR-202126
Approved to	See part listing for associated products: EN54-5:2001. Incorporating Amendment No. 1. Fire detection and fire alarm systems. Part 5: Heat detectors - Point Detectors. [1]
	EN54-7:2001. Incorporating Amendment No. 1. Fire detection and fire alarm systems. Part 7: Smoke detectors - Point detectors using scattered light, transmitted light or ionization. [2][4]
	EN54-25:2008.Incorporating corrigenda September 2010 and March 2012. Fire detection and fire alarm systems. Part 25: Components using radio links. [3]
European Union directives	EMS declares that this device is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.emsgroup.co.uk
	2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see www.recyclethis.info Dispose of your batteries in an environmentally friendly manner according to your local regulations.